

# EM PRO midi® NUCE – Device Reference Manual

---



## Manufacturer

E.E.P.D. Electronic Equipment Produktion & Distribution GmbH  
Gewerbering 3  
85258 Weichs

Phone: +49 8136 2282 – 0  
Web: <https://www.eepd.de>  
E-Mail: [sales@eepd.de](mailto:sales@eepd.de)

09/2025 Version 5.0

## General Notes

This user manual is for your information only.

The information contained herein has been checked carefully and is believed to be reliable. However, E.E.P.D. GmbH gives no guarantee or warranty concerning the accuracy of spoken information and shall not be responsible for any loss or damage of any nature resulting from the usage of or from reliance upon it.

We are thankful for all suggestions or improvements at any time.

E.E.P.D. GmbH reserves the right to make changes in the products or specifications, or both, at any time without notice.

## Copyright Notice

Copyright© 2025 E.E.P.D. GmbH. ALL RIGHTS RESERVED!

E.E.P.D. GmbH copyrights this document. You may not reproduce, transmit, transcribe, store in a retrieval system, or translate into any language or computer language, in any form or by any means, or otherwise, any part of this publication without the express written permission of E.E.P.D. GmbH.

## Trademark Acknowledgement

E.E.P.D.® and EMTRUST® are registered trademarks of E.E.P.D. GmbH. All rights reserved. All other mentioned trademarks are registered trademarks of their owners.

## Disclaimer

This document is provided for the general information of the customer. It describes the general functionality of the system and is not considered as assured characteristics. The written declarations in this specification are not constituent part of any contract.

E.E.P.D. GmbH reserves the right to modify the information contained in this manual as necessary and the customer should ensure that he has the most recent revision of this document.

E.E.P.D. GmbH makes no warranty for the use of its products and bears no responsibility for any errors, which may appear in this document. The customer should be on notice that the field of personal computers is the subject of many patents held by different parties. Customers must ensure that they take appropriate action so that their use of the products does not infringe upon any patents. It is the policy of E.E.P.D. GmbH to respect the valid patent rights of third parties and not to infringe upon or assist others to infringe upon such rights.

E.E.P.D. GmbH assumes no responsibility for circuits, descriptions and tables within this document as far as patents or other rights of third parties are concerned.

## Life Support Applications

E.E.P.D. GmbH products are not intended for being used as critical components in life support appliances, devices or systems in which the failing of an E.E.P.D. GmbH product could be expected to result in personal injury.

## FCC and CE Disclaimer

E.E.P.D. GmbH gives no warranty at all that their products will meet the FCC and CE standards when used in combination with other third-party products or when used in any other way than specified.

## Warranty

The warranty and/or guarantee conditions according to the current terms and conditions of E.E.P.D. GmbH apply.

## Product Returns

If you return the EM PRO system to E.E.P.D. GmbH please remove all connections and peripheral equipment.

Protect the unit with a suitable packaging, preferably use the original packaging.

## Packaging

The EM PRO system is in a protective package to avoid damage during transport.

This protective package should be recycled in an environmentally friendly way after use.

## Disposal of Device



At the end of the lifetime please dispose and/or recycle the components of the device accordingly.

## Technical Support

For technical information about hardware and software please contact:  
[support@eepd.de](mailto:support@eepd.de)

## Revision History

Date	Version	Changes	Proofed
26.09.2025	5.0	First release for HW Rev.5	

## Table of Contents

<b>General Notes</b> .....	<b>1</b>
<b>Revision History</b> .....	<b>4</b>
<b>Symbols</b> .....	<b>6</b>
<b>Safety Instructions</b> .....	<b>7</b>
<b>1 System Information</b> .....	<b>8</b>
1.1 Required Tools.....	8
1.2 OS Support.....	8
1.3 Intended Use.....	8
1.4 Options .....	8
1.5 Accessories.....	8
1.6 Scope of Delivery .....	9
1.7 System Dimensions.....	10
1.8 System Mounting .....	11
<b>2 Technical Data</b> .....	<b>12</b>
<b>3 Interfaces</b> .....	<b>13</b>
3.1 Connection Overview .....	13
3.2 Power Button with LED.....	14
3.3 Auxiliary Power Button   Power and HDD/SSD LED.....	14
3.4 Mini Display Ports.....	14
3.5 2.5 Gigabit Ethernet Dual-Port.....	15
3.6 USB Ports .....	15
3.7 Power Connector (DC).....	15
3.8 Serial Ports .....	16

<b>4 Opening the System</b> .....	<b>17</b>
4.1 Installing M.2 Modules/SSD.....	18
4.2 Installing RAM Modules .....	18
<b>5 Start-up Guide</b> .....	<b>19</b>
5.1 Switching on the Device / Operation .....	19
<b>6 BIOS</b> .....	<b>20</b>
6.1 Entering Setup.....	20
6.2 Most Common Settings.....	20
6.3 Main Menu.....	21
6.4 Advanced Menu.....	22
6.5 Security Menu .....	32
6.6 Power Menu .....	33
6.7 Boot Menu.....	34
6.8 AMD PBS Menu .....	36
6.9 AMD CBS Menu .....	37
6.10 Exit Menu .....	42
<b>Index of Figures</b> .....	<b>43</b>
<b>Index of Tables</b> .....	<b>44</b>
<b>List of Abbreviations</b> .....	<b>45</b>

## Symbols



The red danger sign warns you if incorrect operation puts your life or health at great risk. Both the components and the peripherals could be destroyed.



The orange warning sign warns you that an incorrect or missing operation could seriously endanger your health or destroy the used components.



The yellow caution sign indicates that an incorrect or missing action could damage the components.



The yellow ESD symbol indicates that electrostatic sensitive components could be destroyed. Unpack shielded components only with ESD protection such as an ESD wristband or on an ESD protected area.



The information sign gives you further information and advice for optimal use of this product. For example, it draws your attention to necessary or optional accessories.

## Safety Instructions

### Safety of People



The product generates considerable heat. The housing transports this heat to the environment and thus becomes hot. Take care if you touch the housing as this may cause burns!



Please follow all safety instructions at the installation site. Make sure that no or only necessary cables are connected to the EM PRO midi® during installation.



If access to the EM PRO midi® interfaces is not available after installation, all necessary connections must be made before.

### Device Safety



The EM PRO midi® operates exclusively within the specified DC voltage range. Repair work should only be made by an authorized and certified specialty retailer or by the manufacturer's customer service. Do not open the device to avoid damage.

Modifications that have not been approved by the manufacturer void the warranty. Dust, dirt, moisture, and extreme temperatures may significantly impair proper operation.



The device may only be opened by a qualified person.

### Cooling System



The EM PRO midi® consists of a compact, robust metal housing with ventilation holes. It is equipped with an automated fan. To ensure sufficient heat dissipation, never cover the ventilation holes of the case. Do not place any objects onto the device.

# 1 System Information

## 1.1 Required Tools

For the installation of the EM PRO midi® the following standard tools are recommended:

- Cable connection: Slot screwdriver
- Torx 10 screwdriver
- 5.5 mm Hex Socket Wrench

Other required tools are depending on the installation place and method.

## 1.2 OS Support

Microsoft® Windows® 11

Microsoft® Windows® 11 IoT Enterprise

Microsoft® Windows® 10

Microsoft® Windows® 10 IoT Enterprise

Linux Ubuntu 24.04 LTS

## 1.3 Intended Use

The EM PRO midi® is a robust and reliable Box PC in a highly compact eNUC design. Based on proven industrial solutions, it has been optimized to meet the specific demands of corporate IT environments. Whether used as a compact workstation, mini server, or IoT edge device in production areas and small businesses, it delivers consistent performance and reliability. Designed for continuous 24/7 operation, it ensures maximum uptime even under demanding conditions.

## 1.4 Options

Please contact our sales department for ordering information of optional product features.

Options	Description
Memory modules*	Max. 2x 32 GB dual-channel up to DDR4-3200 SO-DIMM memory with ECC-support
SSD*	64 GB – 2 TB
WLAN/BT module kit**	m.2 WLAN/BT card with two SMA connectors
LTE/modem module kit**	m.2 LTE card with three SMA connectors
Operating System*	Windows® 11, Windows® 11 IoT Enterprise, Linux Ubuntu 24.04 LTS
*factory assembled on request	
#ODM option	

Tab. 1: Options

## 1.5 Accessories

Please contact our sales department for ordering information.

Accessories	Description
Power supply (120 W/19.5 V or 150 W/24 V))	Power supply incl. cable with EU plug
Display cable	Cable Mini DP to HDMI, 2 m, with interlock Cable Mini DP to DP, 2 m
WLAN/BT antenna	SMA antenna
LTE/GPS antenna	SMA antenna with or without cable
Mounting kit (KIUNIHO1)	For DIN rail mounting (universal system holder + TS35 DIN rail holder)

Tab. 2: Accessories

## 1.6 Scope of Delivery

Before you begin installation, please check that your shipment is complete and contains the items listed on the delivery note.

### 1.6.1 Type Label



- Fig. 1: Type label
- 1 – Manufacturer
  - 2 – Product name
  - 3 – Power input voltage range (absolute voltage values)
  - 4 – Serial number with barcode
  - 5 – Certification information

### 1.7 System Dimensions

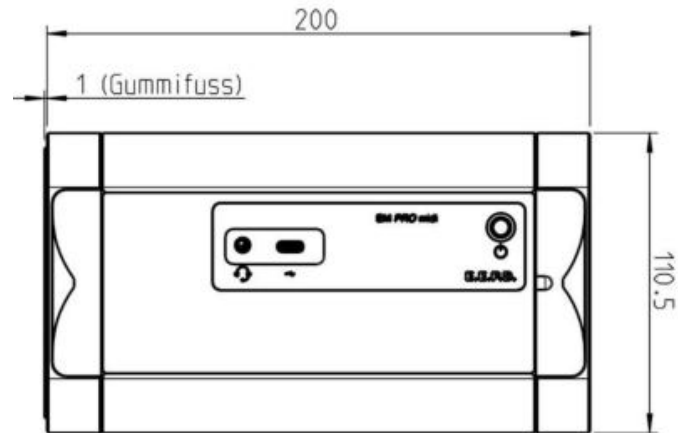


Fig. 2: Dimensions front side, all values [mm] approx.

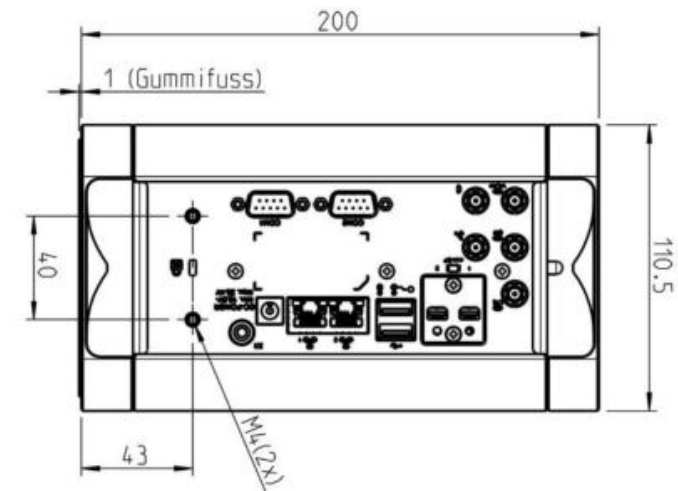


Fig. 3: Dimensions backside, all values [mm] approx.

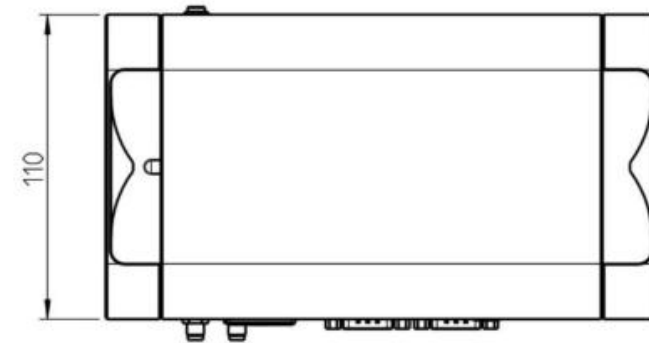


Fig. 4: Dimensions side, all values [mm] approx.

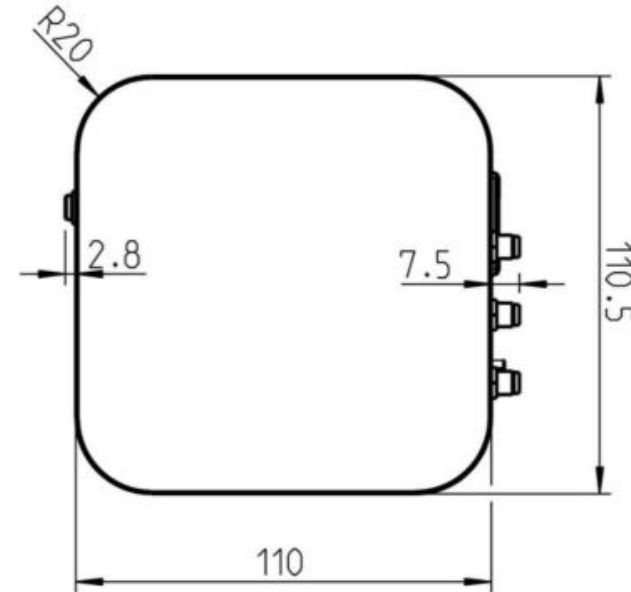


Fig. 5: Dimensions top side, all values [mm] approx.

## 1.8 System Mounting

### 1.8.1 Stand-alone



Fig. 6: EM PRO midi stand-alone

### 1.8.2 Universal Holder (optional)

The EM PRO midi is also designed for a mounting option with a universal holder (Fig. 9).

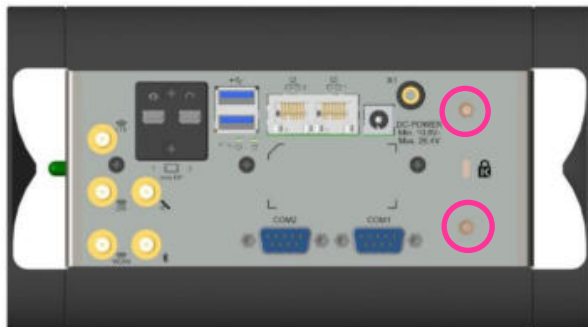


Fig. 7: Universal holder position

Please follow the instructions below:

- Mount the universal holder with the two provided screws at the intended fastening points (see Fig. 7).
- Mount the top-hat rail holder with the two provided screws at the intended fastening points on the universal holder (see Fig. 8). The top-hat rail holder is suitable for “TS35” DIN rails.
- Place the system on the DIN rail. Swivel it inwards until it snaps securely into place.
- To detach the system, push it from bottom to top. Swivel it outwards and remove it.

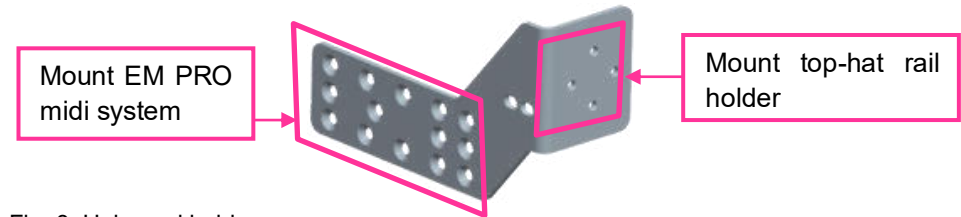
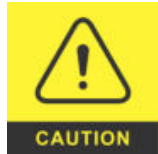


Fig. 8: Universal holder



Fig. 9: EM PRO midi with universal holder and top-hat rail holder

## 2 Technical Data

- AMD Ryzen™ Embedded V2000 series:  
V2546 / 6C / 12T / 3.0 GHz – 3.95 GHz / 35 – 54 W (ODM option only)  
V2748 / 8C / 16T / 2.9 GHz – 4.25 GHz / 35 – 54 W
  - Max. 64GB (2x 32 GB) dual-channel up to DDR4-3200 SODIMM memory with ECC-support
  - Ethernet: 2x Intel® i225-LM with 2.5 Gbit/s with IEEE1588, TSN-support, Wake-on-LAN supported by ETH1
  - WiFi/BT (ODM option only): 802.11 AC with diversity / Bluetooth version 5
  - SSD (optional): 1x M.2 SATA or NVMe, 64 GB – 2 TB
  - USB ports:  
2x USB 3.2 Gen2 (10 Gb/s, OCP = 1.5 A each) at the rear side,  
1x USB 2.0 (480 Mb/s, OCP = 900 mA) under case top,  
1x USB-C 3.2 Gen2 (10 Gb/s, OCP = 3 A) or USB-C Alt-mode at the front side
  - Serial ports: 2x RS-232/485 (HDX/FDX) on D-Sub DE-9
  - Display:  
2x Mini-DP++ connectors up to 3840x2160 @60 Hz  
1x USB-C Alt mode, up to 3840x2160 @60 Hz (only as secondary monitor)
  - Sound: MIC in / headphone out at 3.5 mm Audio Jack
  - Cooling:  
CPU fan, 5V/12V, depending on variant, max. 250 mA, not fused  
optional auxiliary fan, 5V/12V, depending on variant, max. 250 mA, not fused
  - Power and status LEDs
  - Controllable FAN (PWM + Tacho), temperature sensor, power supply voltage monitoring and watchdog
- Power supply: min. 10.8 V / max. 26.4 V (DC), min. 120 W / recommended 150 W, 10 A fused
- 
- 
- Current rating of the power supply has to exceed the expected current draw depending on the system configuration, CPU variant and its TDP settings, and peripheral devices used with the system. Power supplies might derate due to lower efficiency at higher operating temperature. Insufficient power supply might lead to the system instability, shutdown and data loss.
- 
- Power connector:  
2-pin barrel connector for external DC power and ground  
CUI devices power plug ID 2.5 mm, AD 5.5 mm, max. 7 A
  - Power limit:  
Internal and external 3.3 V power max. 25W  
Internal and external 5 V power max. 45 W  
Internal and external power is related to m.2 connectors, USB, FAN and SATA power
  - Operating temperature: min. 0 °C to max. +50 °C ambient commercial grade, adequate cooling provided, depending on variant and cooling system  
CPU throttling may occur at higher ambient temperatures
  - Storage temperature: -40 °C to +85 °C, non-condensing
  - Relative humidity: 95 % @ 40 °C, non-condensing while stored, 89 % while working
  - Housing: robust brushed aluminum housing, anodized black
  - Mounting: stand alone, hat rail (optional) only with mounting kit KIUNIHO1
  - Dimensions approx.: 201 x 117 x 111 mm
  - Weight: approx. 1750 g + options

### 3 Interfaces

#### 3.1 Connection Overview

The EM PRO midi® is equipped with the following standard interfaces:

- 1 – 2x Mini-DP++ connector
- 2 – Dual-USB 3.2 Gen2 port, type A
- 3 – 2x Ethernet 10/100/1000/2500 Mbit/s (RJ45), Port 1 supports WoL
- 4 – Power supply
- 5 – Power button (auxiliary power button at the rear side →5a)
- 6 – 2x Serial port RS-232/485
- 7 – USB 2.0 port, type A (under top case)
- 8 – Sound 3.5 mm MIC in / headphone out
- 9 – USB-C 3.2 Gen2 port
- 10 – up to 5x SMA connector WLAN, BT and mobile network antennae (ODM option only)

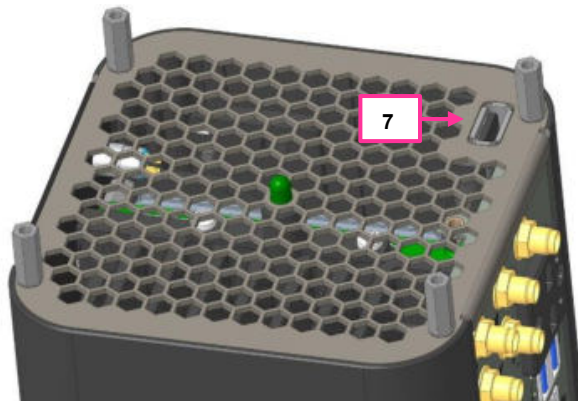


Fig. 10: USB 2.0 port position

#### Front View

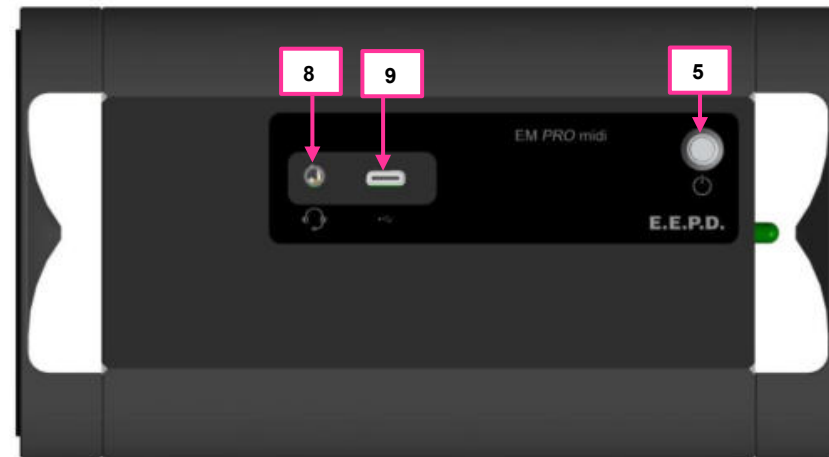


Fig. 11: EM PRO midi® front view

#### Rear View

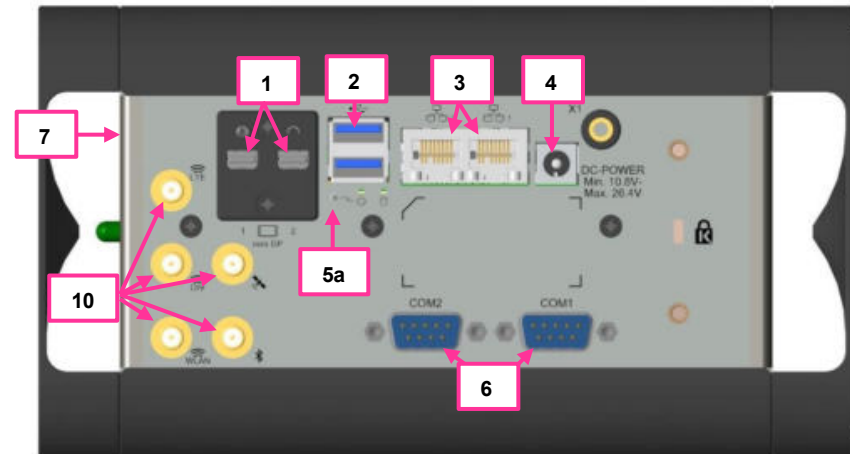


Fig. 12: EM PRO midi® rear view

### 3.2 Power Button with LED

The power button has an integrated LED that lights up a green ring around the power button when the system is turned on.

Press the power button (Fig.8) once to switch the computer on and off.

Press and hold the power button (>4 Sec.) to hard power off the system.

Hard power off may result in data loss.



Fig. 13: Power button with LED

### 3.3 Auxiliary Power Button | Power and HDD/SSD LED

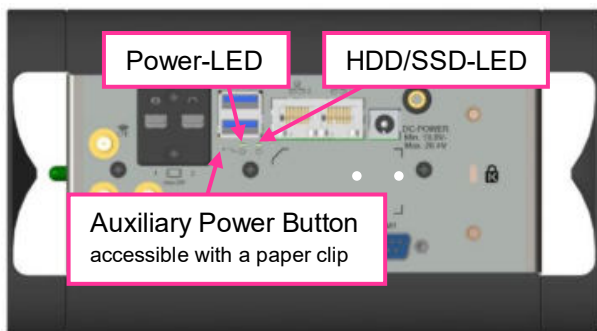


Fig. 14: Auxiliary power button | power and HDD/SSD-LED

### 3.4 Mini Display Ports

Standard pin assignment

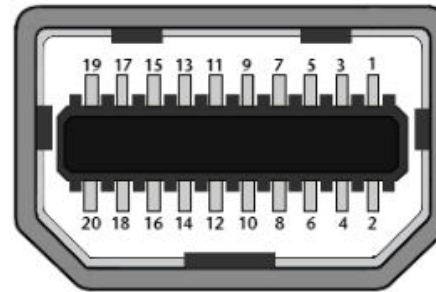


Fig. 15: Mini display port schematic



#### Important Note:

There are two types of DisplayPort cables available:

If you connect the display **directly** to the Mini DP, please use cable with **Pin 20 not connected**.

If you use **active cables/adapters** (e. g. Mini DP to DP, Mini DP to HDMI), please use cable with **Pin 20** (supply voltage) on both ends that are **connected**.

Possible effects if wrong cable is used:

System might not start up properly.

Dongle doesn't work properly (e. g. black display).

### 3.5 2.5 Gigabit Ethernet Dual-Port

Standard pin assignment

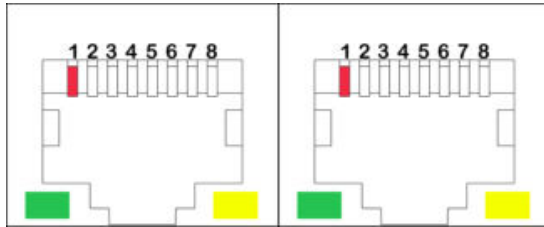


Fig. 16: Dual-Ethernet schematic

#### Yellow LED

Speed-LED is on during 2.5 or 1 Gbit transmission and switched off during 10/100 Mbit transmission.

#### Green LED

Link-/Activity-LED is permanently on to indicate an active connection on the Ethernet port. LED blinks during communication with the Ethernet network.

### 3.6 USB Ports

Standard pin assignment

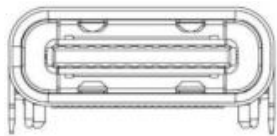


Fig. 17: USB-C 3.2 schematic

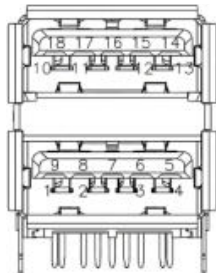


Fig. 18: Dual USB-A 3.2 schematic



Fig. 19: USB-A 2.0 schematic

### 3.7 Power Connector (DC)

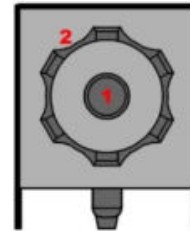


Fig. 20: Power connector schematic



Counterpart - plug:

CUI Devices Power Plug ID 2.5 mm, AD 5.5 mm, max. 7 A  
Ordering number: PP3-002B

Pin	Signal	Description
1	PVIN	DC+ (min 10.8 V to max. 26.4 V), min. 19V recommended
2	GND	Ground

Tab. 3: Pin assignment power connector

### 3.8 Serial Ports

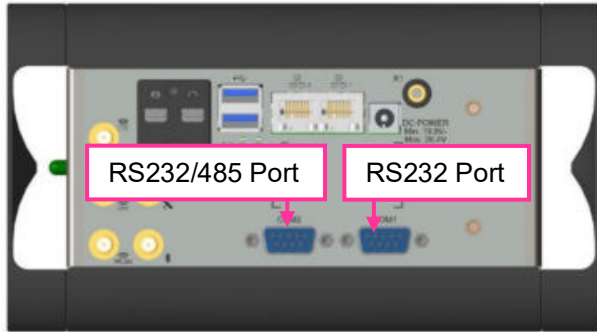


Fig. 21: Serial ports

This option must be enabled in the BIOS → UART Configuration Options, see chapters 6.4.10.1 UART Port 1 Configuration and 6.4.10.2 UART Port 2 Configuration

The serial RS232/485 interface is provided by a multiprotocol transceiver.

The RS232 mode is connected to four wires. The connector is a standard 9-pin D-Sub connector (Fig. 22).

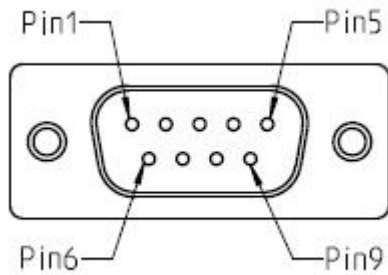


Fig. 22: 9-pin D-SUB connector


9-pin D-Sub	Signal RS-232	Signal RS-485 FDX only	Signal RS485/HDX for Win 10/11 only
1	-	RS485-TX_N	RS485-RX/TX_N
2	-	-	-
3	RXD	RS485-TX_P	RS485-RX/TX_P
4	RTS	-	-
5	TXD	RS485-RX_P	-
6	CTS	-	-
7	-	RS485-RX_N	-
8	-	-	-
9	VCC 5 V +/-5%, max. 500 mA not fused	VCC 5 V +/-5%, max. 500 mA not fused	VCC 5 V +/-5%, max. 500 mA not fused

Tab. 4: Pin assignment RS232/485

## 4 Opening the System



All internal installations may only be performed at an ESD-protected workstation.

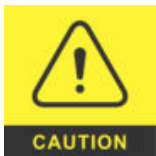

Do not remove any screws other than those specified, otherwise the warranty will be void and you may damage the system.

1. Turn off the system and disconnect from the electrical outlet.
2. Remove the side covers (see Fig. 23)
3. Remove the four top distance bolts as shown in Fig. 24
4. Lift the top cover (Fig. 25)
5. Remove the fan (Fig. 26)
6. Remove the battery holder (Fig. 27)
7. The assembly is carried out in reverse order



Fig. 23: Remove the side covers



Fig. 24: Remove four distance bolts

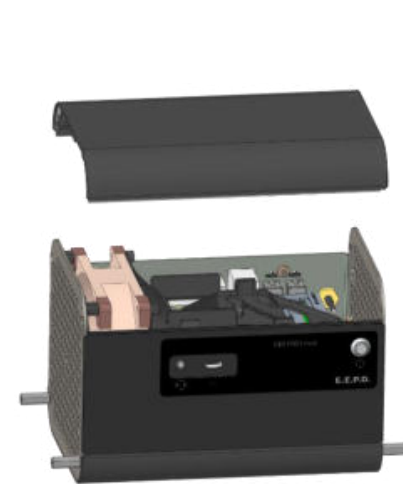


Fig. 25: Lift the top cover

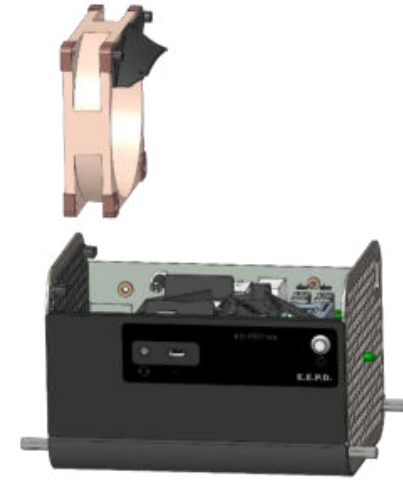


Fig. 26: Remove the fan

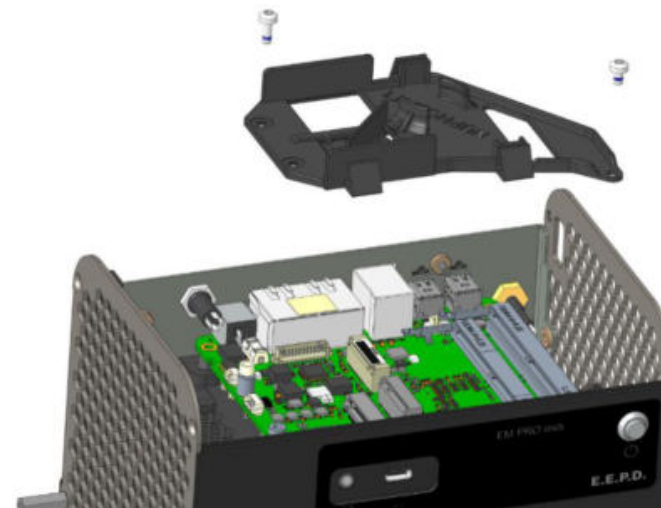


Fig. 27: Remove the battery holder

## 4.1 Installing M.2 Modules/SSD

Insert the module into the corresponding slot (Fig. 29) at an angle. Press it down on the side that protrudes and secure it with the screw provided.

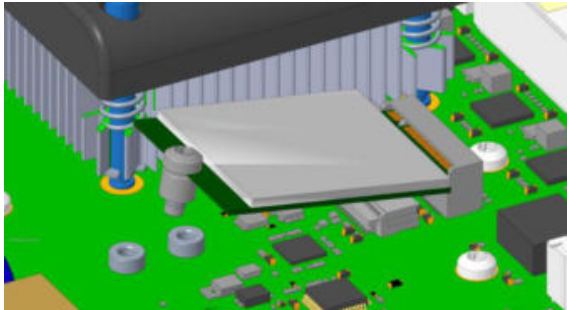


Fig. 28: M.2 module assembly example

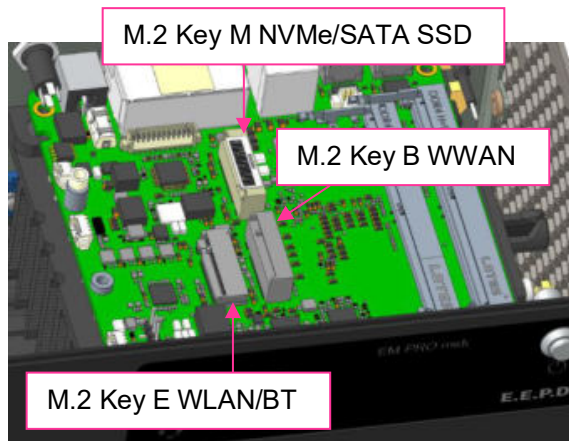


Fig. 29: M.2 module positions

## 4.2 Installing RAM Modules



Use only 1.2 V DDR SO-DIMM modules compliant with the DDR4 standard.

Dual channel DDR4 SO-DIMM memory, max. 2x 32 GB, up to 3200 MT/s, with ECC support.

### Assembly:

First slide RAM module into the RAM socket.  
Then press the module in direction to the board till you hear it snap.

### Disassembly:

First press both clamps outwards.  
Then the RAM module will set upright automatically.  
Remove the module from the socket.


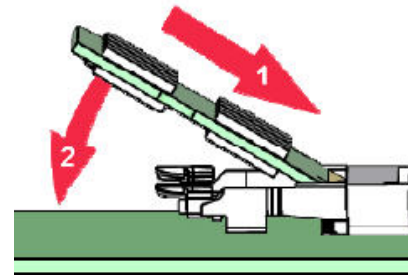


Fig. 30: RAM assembly

## 5 Start-up Guide



If connections are no longer accessible after system installation, connect all cables before final mounting.

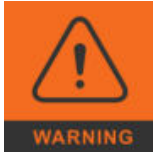

Only connect the power cable when the power supply is switched off.

Before commissioning, we recommend connecting or inserting:

- Monitor
- USB keyboard and mouse
- Network cable (optional)
- DC power supply

Other plug & play devices can be connected after commissioning.

### 5.1 Switching on the Device / Operation

After all preparations have been made, the system is ready to be connected to the power supply.

Press the power button to switch on the system (see chapter 3.2). When the system is powered, the Power LED on the power button will be on and the status LED on the housing (*Fig. 14*) lights up to indicate that all internal voltages are at normal levels.

If an operating system is installed, it will start now. An operating system installation can be performed with installation media such as USB stick, USB DVD drive or PXE remote network start. The BIOS boot order has to be adjusted accordingly. To enter the BIOS setup, press the [ESC] key immediately after switching on.

Please refer to the operating system manual for switching off / shutting down.

## 6 BIOS

The following description shows a snapshot of the BIOS setup. Later BIOS updates may change the content slightly.

Asterisk (\*) indicates default setting.

### 6.1 Entering Setup

Power on the board and press and hold [ESC] immediately to enter Setup.

### 6.2 Most Common Settings

- Firmware / BIOS Version:  
Setup Utility → Main Menu (chapter 6.3)  
or Setup Utility → AMD PBS → AMD Firmware Version (chapter 6.8.1)
- Boot / PXE Boot  
Boot Manager  
or Setup Utility → Boot (chapter 6.7)
- Change shared graphics memory  
Setup Utility → AMD CBS → NBIO Common Options → GFX Configuration  
→ UMA Frame Buffer Size (chapter 6.9.2.1)
- TDP, fan control, boost mode  
TDP setting (chapter 6.9.2.2):  
Setup Utility → AMD CBS → NBIO Common Options → SMU Common Options → System Configuration  
Fan control (chapter 6.9.2.2.1):  
Setup Utility → AMD CBS → NBIO Common Options → SMU Common Options → CPU and Auxiliary Fan Control  
Boost mode (chapter 6.9.1):  
Setup Utility → AMD CBS → CPU Common Options → Core Performance Boost
- USB power  
USB Power off in S5 (chapter 6.4.9):  
Setup Utility → Advanced → NUCE Options → USB Power off in S5  
or  
USB VCC control (chapter 6.4.5):  
Setup Utility → Advanced → USB Configuration

### 6.3 Main Menu

Once you enter the Setup Utility, the Main Menu will appear on the screen:



Fig. 31: Main Menu



This setup menu shows an overview of board configuration, CPU type, memory and firmware revisions.

BIOS Settings	Options	Description
Language	<English>*	
System Time	No options	Set the time. Use tab to switch between time elements [hour:min:sec]. Valid range is from 0 to 23, 0 to 59, 0 to 59. INCREASE/REDUCE: +/-.
System Date	No options	Set the date. Use tab to switch between date elements [month:day:year]. Valid range is from 1 to 12, 1 to 31, 2000 to 2099. (Error checking will be done against month/day/year combinations that are not supported.) INCREASE/REDUCE: +/-.
About this Software		

Tab. 5: Main Menu

## 6.4 Advanced Menu

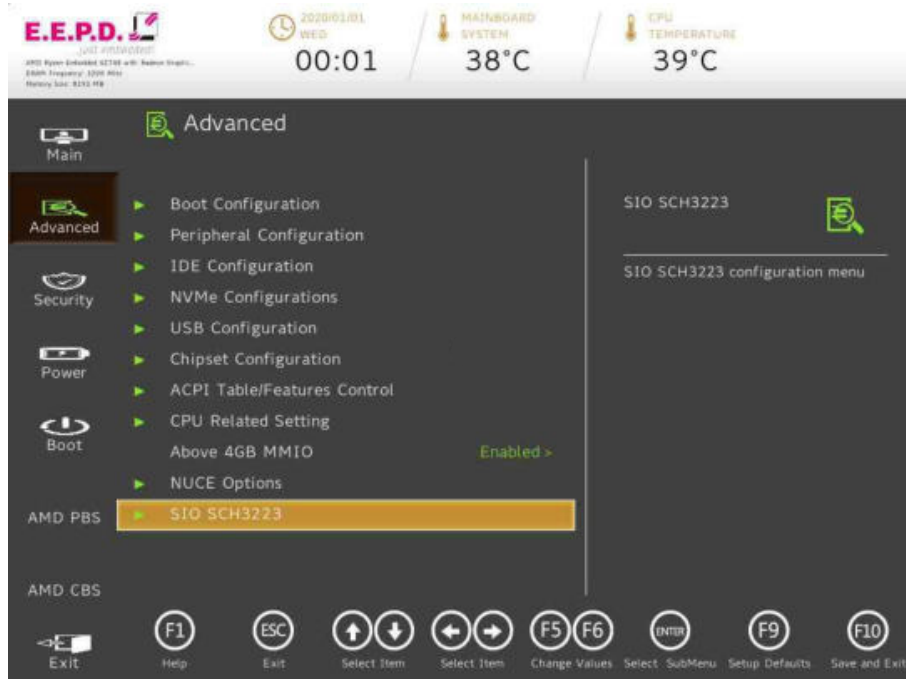


Fig. 32: Advanced Menu

BIOS Settings	Options	Description
Boot Configuration	See submenu	Configures Boot Settings.
Peripheral Configuration	See submenu	Configures the peripheral devices.
IDE Configuration	See submenu	Select the IDE controller and hard disk drive type installed in your system
NVMe Configurations	See submenu	This function shows the connected NVMe devices.
USB Configuration	See submenu	Configure the USB support
Chipset Configuration	See submenu	Advanced Chipset Configuration Options.
ACPI Table/Features Control	See submenu	Configures ACPI Tables/Features setting.
CPU Related Setting	See submenu	CPU Related Setting
Above 4GB MMIO	<Disabled> <Enabled>*	Enable/Disable above 4GB MemoryMappedIO BIOS assignment. It's only available with Uefi Boot Mode.
NUCE Options	See submenu	Configure: PIC watchdog, Wake on LAN, Power LED, USB Power off in S5
SIO SCH3223	See submenu	SIO SCH3223 configuration menu

Tab. 6: Advanced Menu

6.4.1 Boot Configuration

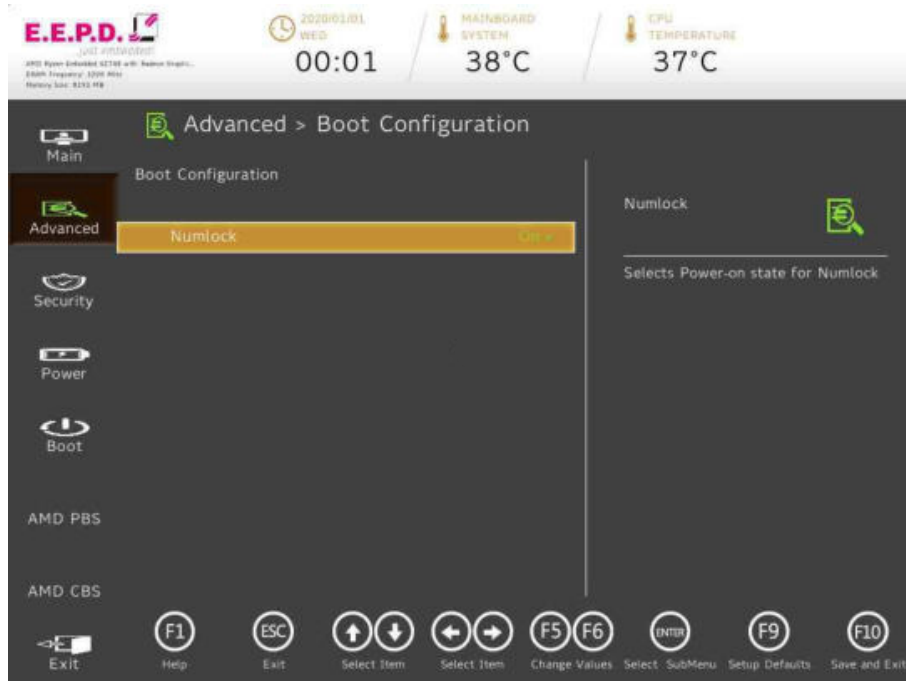


Fig. 33: Boot Configuration

BIOS Settings	Options	Description
Numlock	<Off> <On>*	Configuration of Numlock key at power up.

Tab. 7: Boot Configuration

6.4.2 Peripheral Configuration



Fig. 34: Peripheral Configuration

BIOS Settings	Options	Description
Trusted Platform Module	<Disabled> <Enable discrete TPM>* <Enable firmware TPM>	Enable/Disable TPM physical presence. Need to reboot when set from disable to enable before selecting TPM Operation.
Erase fTPM NV for factory reset	<Disabled> <Enabled>*	Control if need to erase the TPM NV when fTPM factory reset flag set.

Tab. 8: Peripheral Configuration

6.4.3 IDE Configuration



Fig. 35: IDE Configuration

BIOS Settings	Options	Description
SATA	<Disabled> <Auto>*	AUTO: Auto detect the SATA controller. DISABLED: Disable the SATA controller
SATA Configure as	<IDE> <AHCI>*	Set SATA Configure Type
SATA Controller	See submenu	Enable/Disable SATA Controller
Serial ATA Port 0 [Not Installed]	See submenu	Serial ATA Port 0 Device configuration
Serial ATA Port 1 [Not Installed]	See submenu	Serial ATA Port 1 Device configuration
Serial ATA Port 2 [Not Installed]	See submenu	Serial ATA Port 2 Device configuration

Tab. 9: IDE Configuration

6.4.3.1 SATA Controller



Fig. 36: SATA Controller

BIOS Settings	Options	Description
SATA Port 0	<Disabled> <Enabled>*	SATA Port 0 Enable/Disable
SATA Port 1	<Disabled> <Enabled>*	SATA Port 1 Enable/Disable
SATA Port 0	<Disabled> <Enabled>*	SATA Port 0 Enable/Disable

Tab. 10: SATA Controller

6.4.4 NVMe Configurations

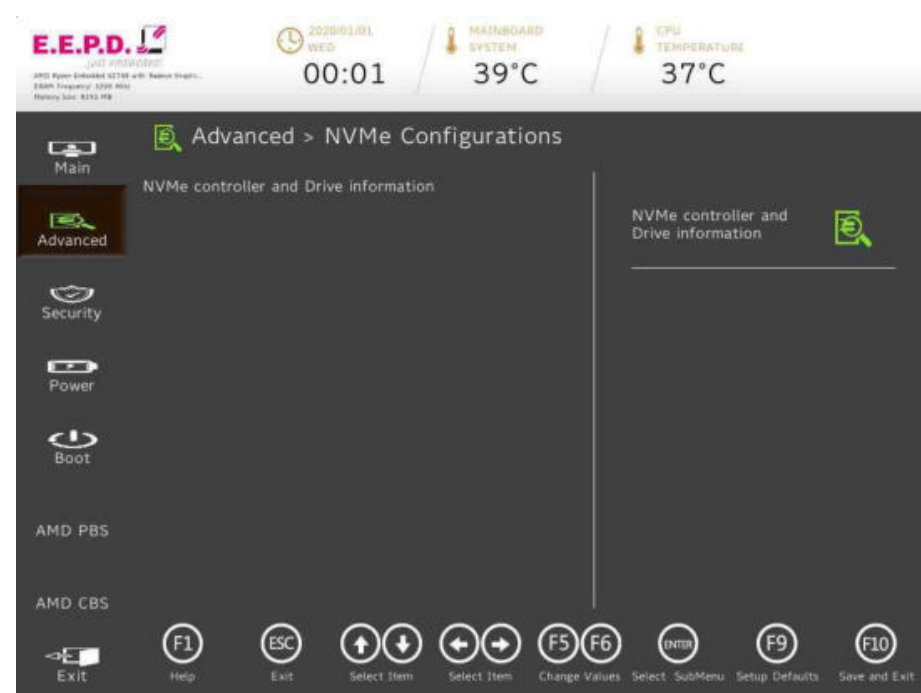


Fig. 37: NVMe Configurations

BIOS Settings	Options	Description
NVMe controller and Drive information	<Disabled> <Enabled>*	This function shows the connected NVMe devices.

Tab. 11: NVMe Configurations

6.4.5 USB Configuration



Fig. 38: USB Configuration

BIOS Settings	Options	Description
Enable/Disable – VCC of USB Jacks	See submenu	Enable/Disable – USB VCC

Tab. 12: USB Configuration



Note:

In order to not exclude yourself from the BIOS setup, at least one USB port should be enabled at all times.

6.4.5.1 Enable/Disable – VCC of USB Jacks



Fig. 39: USB Ports

BIOS Settings	Options	Description
USB 3.1 Rear Port	<Disabled> <Enabled>*	This function allows you to enable or disable the power for the Rear USB port.
USB 2.0 Internal	<Disabled> <Enabled>*	This function allows you to enable or disable the power for the internal USB port.

Tab. 13: USB Ports

6.4.6 Chipset Configuration



Fig. 40: Chipset Configuration

BIOS Settings	Options	Description
PCI Latency Timer	<32> <64>* <96> <128> <160> <192> <224> <248>	PCI Latency Timer

Tab. 14: Chipset Configuration

6.4.7 ACPI Table/Features Control



Fig. 41: ACPI Table/Features Control

BIOS Settings	Options	Description
HPET - HPET Support	<Disabled> <Enabled>*	High Precision Event Timer is supported in Windows Vista or above. HPET controller should not been seen in Windows XP no matter enable/disable in SCU. If this feature is enabled, the HPET table will be added into ACPI Tables.

Tab. 15: ACPI Table/Features Control

6.4.8 CPU Related Setting

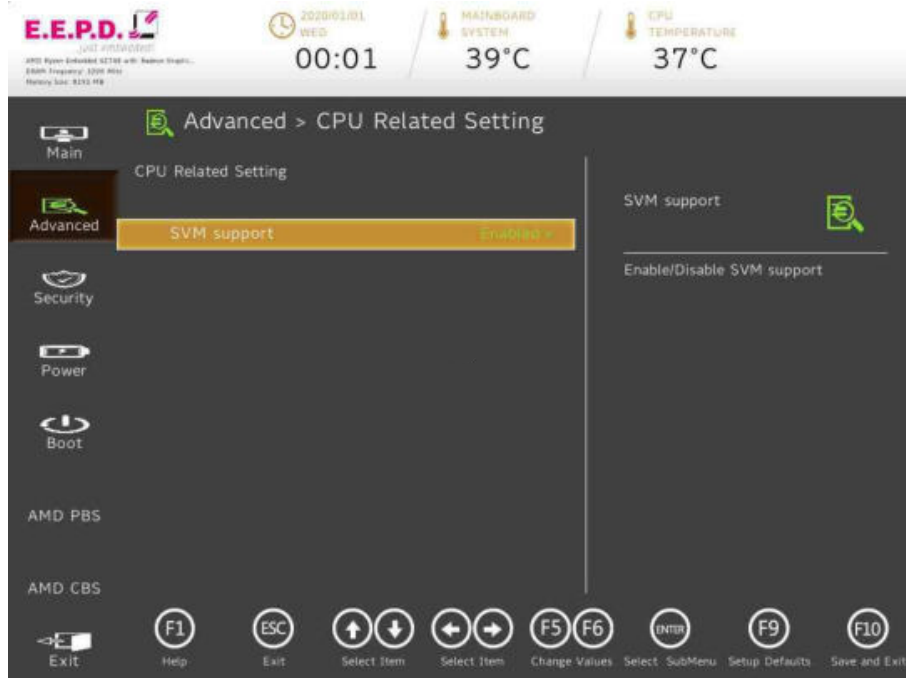


Fig. 42: CPU Related Setting

BIOS Settings	Options	Description
SVM support	<Disabled> <Enabled>*	Enable/Disable SVM support SVM mode is an option to enable a so-called secure virtual machine

Tab. 16: CPU Related Setting

6.4.9 NUCE Options



Fig. 43: NUCE Options


BIOS Settings	Options	Description
PIC Watchdog	<Disabled>* <Enabled>	Enable/Disable the PIC watchdog
Watchdog Timeout (s)	Adjust value [30-254] Default value [40]*	Seconds before PIC watchdog times out. Range 30-254 seconds.
Wake on LAN	<Disabled> <Enabled>*	Enable/Disable Wake on LAN
Power LED Mode	<Disabled> <Enabled>*	Set Power LED Mode (Enable/Disable)

USB 3.1 Rear Port	<Disabled>* <Enabled>	Force USB VCC Off in S5. [Disabled]: Leaves VCC of USB Jack unchanged as in Advanced > USB Configuration > Enable/Disable - VCC of USB Jacks [Enabled]: Switches USB VCC off in S5 (System Power Off)!
USB 2.0 Internal	<Disabled>* <Enabled>	

Tab. 17: NUCE Options



API or code sample to reset watchdog on request.

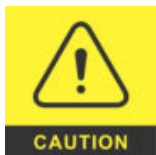

Enabling watchdog leads to the reset of the board after time out. Please contact EEPD for further instructions.

6.4.10 SIO SCH3223

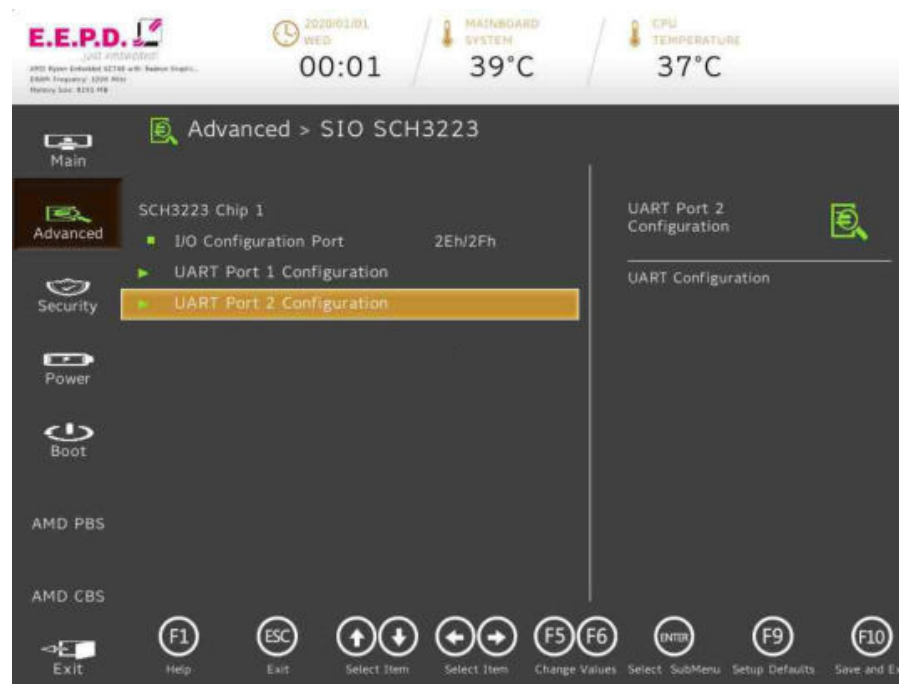


Fig. 44: SIO SCH3223

BIOS Settings	Options	Description
UART Port 1 Configuration	See submenu	UART Configuration
UART Port 2 Configuration	See submenu	UART Configuration

Tab. 18: SIO SCH3223

6.4.10.1 UART Port 1 Configuration

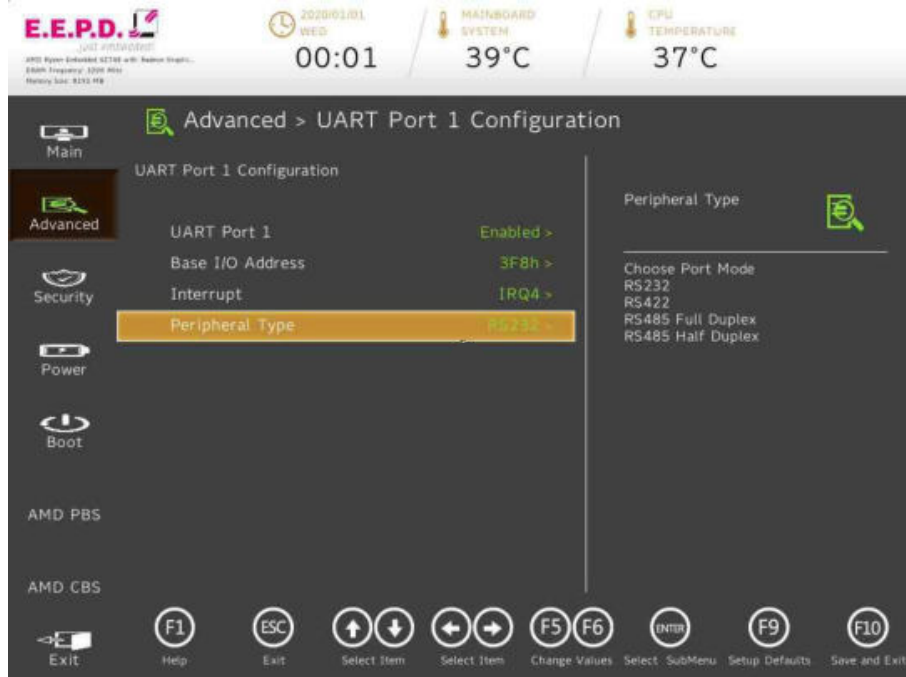


Fig. 45: UART Port 1 Configuration

BIOS Settings	Options	Description
UART Port 1	<Disabled> <Enabled>*	Configure UART port using options: [Disabled] Disable device [Enabled] Enable device and use below settings
Base I/O Address	<3F8h>* <2F8h> <3E8h> <2E8h> <338h> <228h> <220h> <238h>	System I/O base resources
Interrupt	<IRQ3> <IRQ4>* <IRQ6> <IRQ7> <IRQ11>	System interrupt resources
Peripheral Type	<RS232>* <RS422> <RS485 FULL DUPLEX> <RS485 HALF DUPLEX>	Choose Port Mode: RS232 RS422 RS485 Full Duplex RS485 Half Duplex

Tab. 19: UART Port 1 Configuration

6.4.10.2 UART Port 2 Configuration

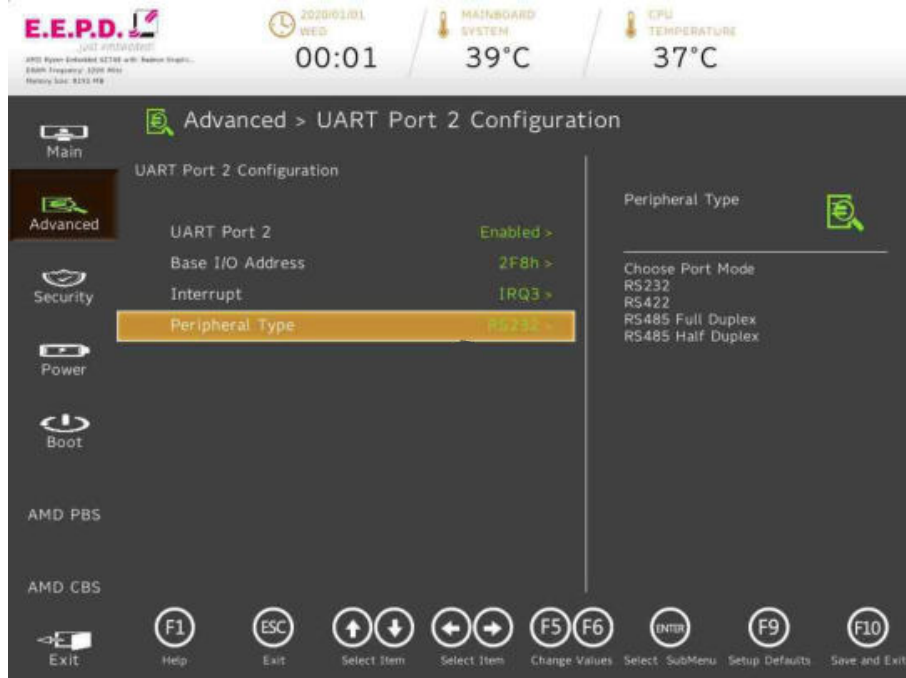


Fig. 46: UART Port 2 Configuration

BIOS Settings	Options	Description
UART Port 2	<Disabled> <Enabled>*	Configure UART port using options: [Disabled] Disable device [Enabled] Enable device and use below settings
Base I/O Address	<3F8h> <2F8h>* <3E8h> <2E8h> <338h> <228h> <220h> <238h>	System I/O base resources
Interrupt	<IRQ3>* <IRQ4> <IRQ6> <IRQ7> <IRQ11>	System interrupt resources
Peripheral Type	<RS232>* <RS422> <RS485 FULL DUPLEX> <RS485 HALF DUPLEX>	Choose Port Mode: RS232 RS422 RS485 Full Duplex RS485 Half Duplex

Tab. 20: UART Port 2 Configuration

## 6.5 Security Menu



Fig. 47: Security Menu

BIOS Settings	Options	Description
Current TPM Device	<Not Detected> <TPM 1.2> <TPM 2.0 (DTPM)>*	Current TPM Device: TPM1.2, or TPM2.0.
TrEE Protocol Version	<1.0> <1.1>*	TrEE Protocol Version: 1.0 or 1.1

TPM Availability	<Available>* <Hidden>	When hidden, doesn't expose TPM to OS
TPM Operation	<No Operation>* <Enable> <SetPCRBanks(Algorithm)> <LogAllDigests> <SetPPRequiredForClear_True> <SetPPRequiredForClear_False> <SetPPRequiredForTurnOn_False> <SetPPRequiredForTurnOn_True> <SetPPRequiredForTurnOff_False> <SetPPRequiredForTurnOff_True> <SetPPRequiredForChangePCRs_False> <SetPPRequiredForChangePCRs_True> <SetPPRequiredForChangeEPS_False> <SetPPRequiredForChangeEPS_True> <ChangeEPS>	Select one of the supported operations to change TPM2 state.
Clear TPM	<Disabled>* <Enabled>	Clear TPM. Removes all TPM context associated with a specific Owner.
Set Supervisor Password	None	Install or change the password and the length of password must be greater than one character.

Tab. 21: Security Menu

6.5.1 Storage Password Setup Page



Fig. 48: Storage Password Setup Page

BIOS Settings	Options	Description
TCG Storage Action	<No Operation>* <Enable_BlockSIDFunc> <Disable_BlockSIDFunc> <PPRequiredForEnableBlockSID_True> <PPRequiredForEnableBlockSID_False> <PPRequiredForDisableBlockSID_True> <PPRequiredForDisableBlockSID_False>	Change BlockSID actions, includes enable or disable BlockSID, Require or not require physical presence when remote enable or disable BlockSID

Tab. 22: Storage Password Setup Page

6.6 Power Menu



Fig. 49: Power Menu

BIOS Settings	Options	Description
Auto Wake on S5	<Disabled>* <By Every Day> <By Day of Month>	Auto wake on S5, By Day of Month or Fixed time of every day

Tab. 23: Power Menu

6.7 Boot Menu



Fig. 50: Boot Menu

BIOS Settings	Options	Description
Quick Boot	<Enabled>* <Disabled>	Allows InsydeH2O to skip certain tests while booting. This will decrease the time needed to boot the system.
Quiet Boot	<Enabled>* <Disabled>	Disables or enables booting in Text Mode.
Network Stack	<Disabled>* <Enabled>	Network Stack Support: Windows 8 BitLocker Unlock UEFI IPv4/IPv6 PXE Legacy PXE OPRM

PXE Boot capability	<Disabled>*	Disabled: Support Network Stack UEFI PXE: IPv4/IPv6 Legacy: Legacy PXE OPRM only
Power Up In Standby Support	<Enabled> <Disabled>*	Disable or enable Power Up in Standby Support. The PUIS feature set allows devices to be powered-up into the Standby power management state to minimize inrush current at power-up and to allow the host to sequence the spin-up of devices.
Add Boot Options	<First> <Last> <Auto>*	Position in Boot Order for Shell, Network and Removables
USB Boot	<Enabled>* <Disabled>	Disables or enables booting to USB boot devices.
UEFI OS Fast Boot	<Enabled>* <Disabled>	If enabled the system firmware does not initialize keyboard and check for firmware menu key.
USB Hot Key Support	<Disabled>* <Enabled>	Enable/Disable to support USB hot key while booting. This will decrease the time needed to boot the system.
Timeout(s)	Adjust value [0-10] Default value [5]	The number of seconds that the firmware will wait before booting the original default boot selection.
Automatic Failover	<Disabled> <Enabled>*	Enable: if boot to default device fail, it will directly try to boot next device. Disable: if boot to default device fail, it will pop warning message then go into firmware UI.
EFI	See submenu	EFI Boot Order Settings

Tab. 24: Boot Menu

6.7.1 EFI



Fig. 51: EFI

BIOS Settings	Options	Description
EFI USB Device (SanDisk)	<Enabled> <Disabled>	
Internal EFI Shell	<Enabled> <Disabled>	

Tab. 25: EFI

## 6.8 AMD PBS Menu



Fig. 52: AMD PBS Menu

BIOS Settings	Options	Description
AMD Firmware Version	See submenu	Show all of AMD Firmware Version
M.2 Key M SATA/PCIE Selection	<Force PCIE> <Force SATA> <Auto Detection>*	M.2 Key M SATA/PCIE Selection usage: SATA, PCIE or Auto Detection
WWAN Power Control	<Enabled>* <Disabled>	Enable/disable Power of M.2 Key B Slot (WWAN)
WWAN Radio Operation	<Enabled>* <Disabled>	Enable/disable Radio Operation of M.2 Key B Slot (WWAN)
WLAN Radio Operation	<Enabled>* <Disabled>	Enable/disable WLAN Radio Operation of M.2 Key E Slot
BT Radio Operation	<Enabled>* <Disabled>	Enable/disable Bluetooth (BT) Radio Operation of M.2 Key E Slot

Tab. 26: AMD PBS Menu

6.8.1 AMD Firmware Version

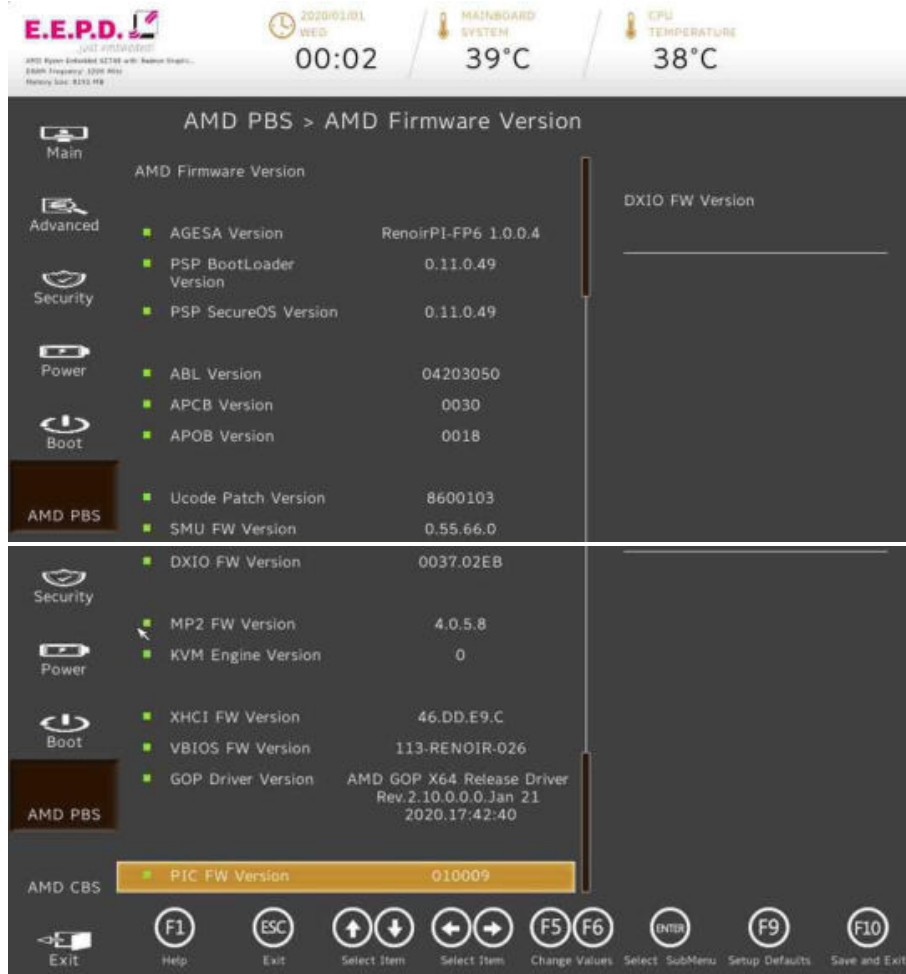


Fig. 53: AMD Firmware Version

6.9 AMD CBS Menu



Fig. 54: AMD CBS Menu

BIOS Settings	Options	Description
CPU Common Options	See submenu	CPU Common Options
NBIO Common Options	See submenu	NBIO Common Options
FCH Common Options	See submenu	FCH Common Options

Tab. 27: AMD CBS Menu

6.9.1 CPU Common Options

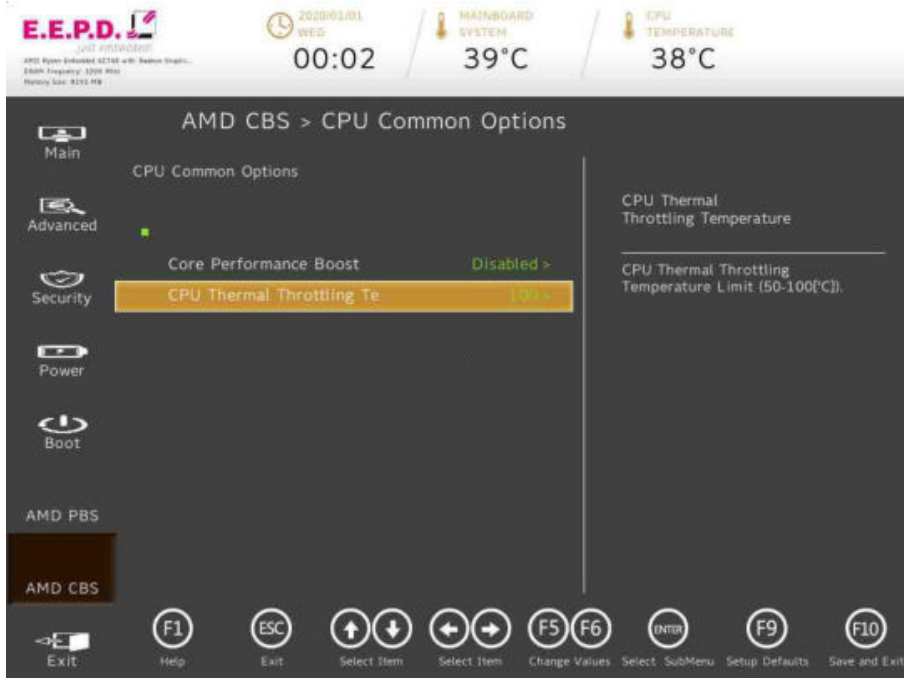


Fig. 55: CPU Common Options

BIOS Settings	Options	Description
Core Performance Boost	<Disabled>* <Auto>	This allows the processor to dynamically adjust and control the processor operating frequency to enable performance improvement.
CPU Thermal Throttling Temperature	Adjust value [50 - 100*]	CPU Thermal Throttling Temperature Limit (50-100[°C])

Tab. 28: CPU Common Options

6.9.2 NBIO Common Options



Fig. 56: NBIO Common Options

BIOS Settings	Options	Description
GFX Configuration	See submenu	GFX Configuration
SMU Common Options	See submenu	SMU Common Options

Tab. 29: NBIO Common Options

6.9.2.1 GFX Configuration



Fig. 57: GFX Configuration

BIOS Settings	Options	Description
iGPU Configuration	<Auto>* <UMA_SPECIFIED> <UMA_AUTO> <UMA_GAME_OPTIMIZED>	UMA Mode Select UMA_SPECIFIED to set UMA Frame Buffer Size.
UMA Frame Buffer Size	<Auto> <64M> <128M> <256M> <384M> <512M> <80M> <96M> <768M> <1G> <2G>* <3G> <6G> <8G> <16G>	This allows the system to manage the amount of shared memory for graphics. For systems equipped with 8GB of RAM or more, set the UMA buffer size to 1GB or 2GB
UMA Version	<Legacy> <Non-Legacy> <Hybrid Secure> <Auto>*	UMA Legacy Version UMA Non-Legacy Version Hybrid Secure
GPU Host Translation Cache	<Disabled> <Enabled> <Auto>*	Option to disable GPU Host Translation Cache

Tab. 30: GFX Configuration

6.9.2.2 SMU Common Options

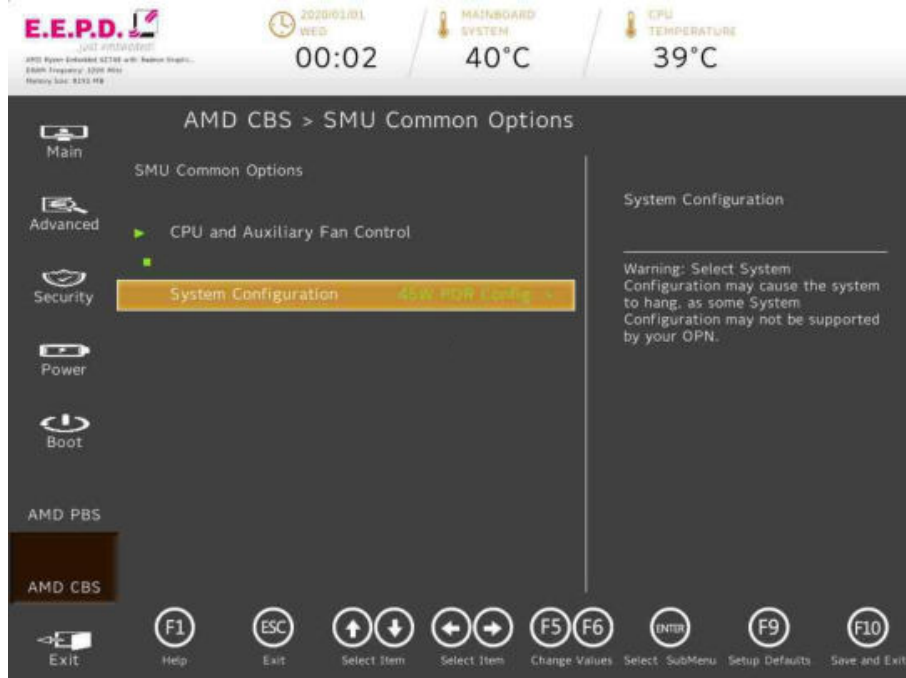


Fig. 58: SMU Common Options

BIOS Settings	Options	Description
CPU and Auxiliary Fan Control	See submenu	CPU and Auxiliary Fan Control
System Configuration	<10W – 54W POR Configuration> (depending on the system)	Warning: Select System Configuration may cause the system to hang, as some System Configuration may not be supported by your OPN.

Tab. 31: SMU Common Options

6.9.2.2.1 CPU and Auxiliary Fan Control

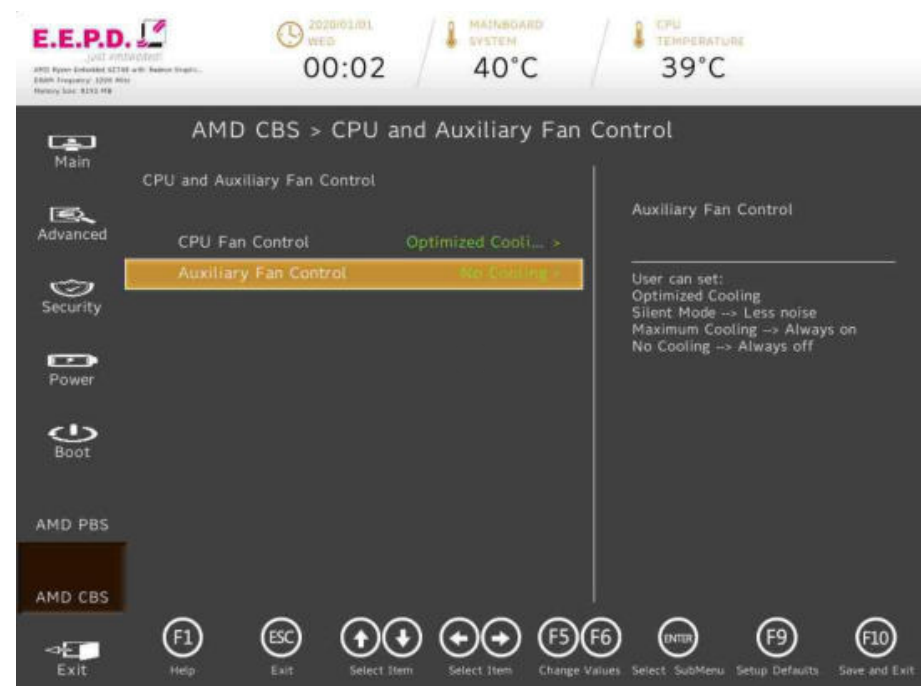


Fig. 59: CPU and Auxiliary Fan Control

BIOS Settings	Options	Description
CPU Fan Control	<Optimized Cooling>* <Silent Mode> <Maximum Cooling> <No Cooling>	Optimized Cooling → Automatic PWM control depending on temperature Silent Mode → Less noise (30%)
Auxiliary Fan Control	<Optimized Cooling> <Silent Mode> <Maximum Cooling> <No Cooling>*	Maximum Cooling → Always on (100%) No Cooling → Always off

Tab. 32: CPU and Auxiliary Fan Control

6.9.3 FCH Common Options



Fig. 60: FCH Common Options

BIOS Settings	Options	Description
Ac Power Loss Options	See submenu	Ac Power Loss Options

Tab. 33: FCH Common Options

6.9.3.1 Ac Power Loss Options



Fig. 61: Ac Power Loss Options

BIOS Settings	Options	Description
Ac Loss Control	<Always Off> <Always On>* <Previous>	This function allows you to set the power status after a power failure. Select [Always Off] to keep the system power off after a power failure. Select [Always On] to turn the system power after a power failure. Select [Previous] to allow the System to resume its last power state before a power failure.

Tab. 34: Ac Power Loss Options

6.10 Exit Menu

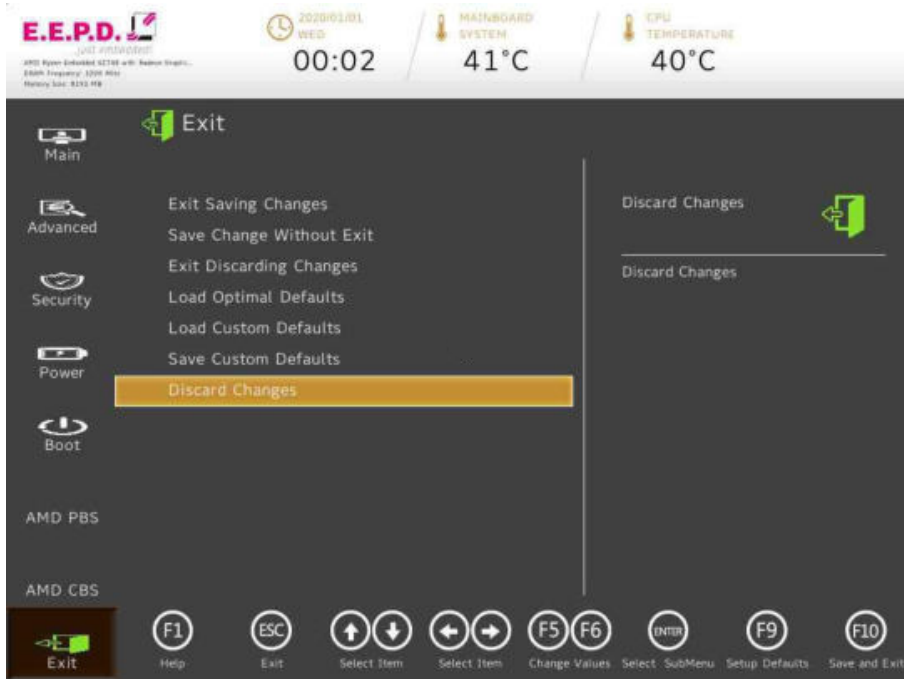


Fig. 62: Exit Menu

BIOS Settings	Options	Description
Exit Saving Changes		Exit system setup after saving your changes.
Save Change Without Exit		Save your changes without exiting system setup.
Exit Discarding Changes		Exit system setup without saving your changes.
Load Optimal Defaults		Load Optimal Defaults to all the setup options.
Load Custom Defaults		Load Custom Defaults to all the setup options.
Save Custom Defaults		Save changes done so far as Custom Defaults.
Discard Changes		Discard Changes done so far to any of the setup options.

Tab. 35: Exit Menu

## Index of Figures

Fig. 1: Type label .....	9	Fig. 32: Advanced Menu.....	22
Fig. 2: Dimensions front side, all values [mm] approx. ....	10	Fig. 33: Boot Configuration .....	23
Fig. 3: Dimensions backside, all values [mm] approx. ....	10	Fig. 34: Peripheral Configuration .....	23
Fig. 4: Dimensions side, all values [mm] approx. ....	10	Fig. 35: IDE Configuration .....	24
Fig. 5: Dimensions top side, all values [mm] approx. ....	10	Fig. 36: SATA Controller.....	25
Fig. 6: EM PRO midi stand-alone .....	11	Fig. 37: NVMe Configurations.....	25
Fig. 7: Universal holder position .....	11	Fig. 38: USB Configuration .....	26
Fig. 8: Universal holder .....	11	Fig. 39: USB Ports.....	26
Fig. 9: EM PRO midi with universal holder and top-hat rail holder.....	11	Fig. 40: Chipset Configuration .....	27
Fig. 10: USB 2.0 port position.....	13	Fig. 41: ACPI Table/Features Control .....	27
Fig. 11: EM PRO midi® front view.....	13	Fig. 42: CPU Related Setting.....	28
Fig. 12: EM PRO midi® rear view.....	13	Fig. 43: NUCE Options.....	28
Fig. 13: Power button with LED .....	14	Fig. 44: SIO SCH3223.....	29
Fig. 14: Auxiliary power button   power and HDD/SSD-LED.....	14	Fig. 45: UART Port 1 Configuration .....	30
Fig. 15: Mini display port schematic.....	14	Fig. 46: UART Port 2 Configuration .....	31
Fig. 16: Dual-Ethernet schematic .....	15	Fig. 47: Security Menu.....	32
Fig. 17: USB-C 3.2.....	15	Fig. 48: Storage Password Setup Page .....	33
Fig. 18: Dual USB-A 3.2 schematic .....	15	Fig. 49: Power Menu .....	33
Fig. 19: USB-A 2.0.....	15	Fig. 50: Boot Menu.....	34
Fig. 20: Power connector schematic.....	15	Fig. 51: EFI .....	35
Fig. 21: Serial ports.....	16	Fig. 52: AMD PBS Menu .....	36
Fig. 22: 9-pin D-SUB connector.....	16	Fig. 53: AMD Firmware Version .....	37
Fig. 23: Remove the side covers .....	17	Fig. 54: AMD CBS Menu .....	37
Fig. 24: Remove four distance bolts .....	17	Fig. 55: CPU Common Options .....	38
Fig. 25: Lift the top cover.....	17	Fig. 56: NBIO Common Options .....	38
Fig. 26: Remove the fan .....	17	Fig. 57: GFX Configuration .....	39
Fig. 27: Remove the battery holder .....	17	Fig. 58: SMU Common Options .....	40
Fig. 28: M.2 module assembly example.....	18	Fig. 59: CPU and Auxiliary Fan Control .....	40
Fig. 29: M.2 module positions.....	18	Fig. 60: FCH Common Options.....	41
Fig. 30: RAM assembly .....	18	Fig. 61: Ac Power Loss Options.....	41
Fig. 31: Main Menu .....	21	Fig. 62: Exit Menu .....	42

**Index of Tables**

Tab. 1: Options ..... 8  
 Tab. 2: Accessories ..... 8  
 Tab. 3: Pin assignment power connector ..... 15  
 Tab. 4: Pin assignment RS232/485 ..... 16  
 Tab. 5: Main Menu ..... 21  
 Tab. 6: Advanced Menu ..... 22  
 Tab. 7: Boot Configuration ..... 23  
 Tab. 8: Peripheral Configuration ..... 23  
 Tab. 9: IDE Configuration ..... 24  
 Tab. 10: SATA Controller ..... 25  
 Tab. 11: NVMe Configurations ..... 25  
 Tab. 12: USB Configuration ..... 26  
 Tab. 13: USB Ports ..... 26  
 Tab. 14: Chipset Configuration ..... 27  
 Tab. 15: ACPI Table/Features Control ..... 27  
 Tab. 16: CPU Related Setting ..... 28  
 Tab. 17: NUCE Options ..... 29  
 Tab. 18: SIO SCH3223 ..... 29  
 Tab. 19: UART Port 1 Configuration ..... 30  
 Tab. 20: UART Port 2 Configuration ..... 31  
 Tab. 21: Security Menu ..... 32  
 Tab. 22: Storage Password Setup Page ..... 33  
 Tab. 23: Power Menu ..... 33  
 Tab. 24: Boot Menu ..... 34  
 Tab. 25: EFI ..... 35  
 Tab. 26: AMD PBS Menu ..... 36  
 Tab. 27: AMD CBS Menu ..... 37  
 Tab. 28: CPU Common Options ..... 38  
 Tab. 29: NBIO Common Options ..... 38  
 Tab. 30: GFX Configuration ..... 39  
 Tab. 31: SMU Common Options ..... 40

Tab. 32: CPU and Auxiliary Fan Control ..... 40  
 Tab. 33: FCH Common Options ..... 41  
 Tab. 34: Ac Power Loss Options ..... 41  
 Tab. 35: Exit Menu ..... 42

## List of Abbreviations

AC	Alternating current
APAC	Asia Pacific and countries
BIOS	Basic input/output system
BT	Bluetooth
DC	Direct current
DDR4	Fourth generation „double data rate“ memory technology
DP	Display port
EMEA	Europe, Middle East, Africa
GND	Ground
GNSS	Global Navigation Satellite System
IoT	Internet of Things
LTE	Long Term Evolution
MIC	Microphone
M.2	Next generation mSATA
NVME	Non-Volatile Memory Express
OCP	Over Current Protection
PWM	Pulse-width modulation
RAM	Random access memory
RS-232	Serial standard interface
RS-485	Serial standard interface
SD	Secure digital memory card
SIM	Subscriber identity module
SMA	Subminiature version A connector
SO-DIMM	Small outline dual inline memory module
SSD	Solid state drive
UART	Universal Asynchronous Receiver / Transmitter
USB	Universal serial bus
WLAN	Wireless local area network
WWAN	Wireless wide area network

